Assembly Instructions for Chimera PB223 Rifle

- 1. Unscrew forend retaining nut from barrel assembly and remove forend from barrel assembly
- 2. Slide and hold charge handle retaining pin back to remove charge handle
- 3. Slide top action fixing pin out to the left side of the gun, but not fully out of the gun (there is a stopper on this pin)
- 4. Line up dovetail of picatinny rail with dovetail on top of receiver, and slide barrel assembly fully into receiver
- 5. Insert long section of action fixing pin into left side of receiver, taking care to line up straight sides of pins of straight sides in receiver
- 6. Insert fixing pin screw into right side of receiver and tighten ***note this screw is reverse threaded
- 7. Slide top retention pin back into place
- 8. Slide charge handle retention pin back and re-insert charge handle
- 9. Slide forend back over bottom action and return forend retaining nut

Assembly Tips

- Ensure the action spring guide rod is fully seated
- Ensure the top action fixing pin is fully at the stopper out to the left of the receiver
- Ensure the bolt is properly seated on action bar
- Ensure the picatinny rail dovetails into the receiver





PLEASE NOTE

A proper firearm cleaning and maintenance routine is critical to the functionality and reliability of any firearm. The manufacturer recommends the use of high-quality **Boar Products** Cleaners and Lubricants for the proper maintenance of your Chimera PB223